
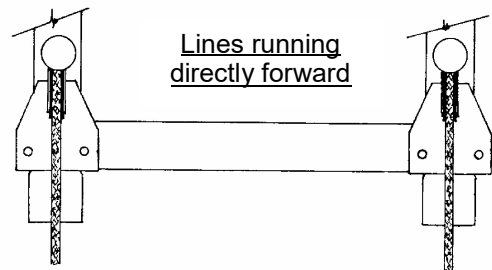
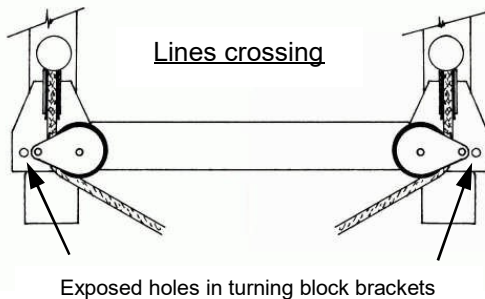
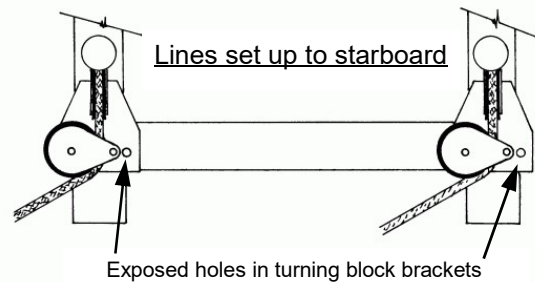


ADDENDA FOR MONITOR MANUAL - June 2010 (continued)

INSTALLING THE PENDULUM SHEET LINES (Section 3.5)

Note that new Monitors are shipped with their turning blocks set up to lead the lines to port for a wheel-equipped boat, and with the lines crossing for a tiller-equipped boat. If you are shifting a Monitor from one boat to the other, switch the turning blocks to match the new installation. Note that wheel-equipped boats can have the lines set up both to port, both to starboard, or one on each side, as preferred. Tiller-equipped boats must have the lines crossing to opposite sides - see instructions. When moving the turning blocks, set up their mounting bolts so the lines have a straight run from the interior blocks to the turning blocks, without an offset 'jog' which will cause binding and chafe.

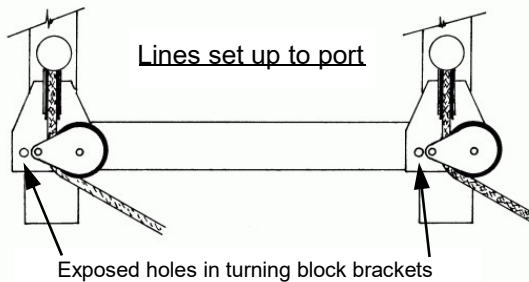

MRUD INSTRUCTIONS (Section 7.1)

The wooden wedge described in the manual has been replaced by a stainless steel bracket. Refer to the MRUD brochure or the MRUD section on the Scanmar website www.selfsteer.com for instructions.

TILLER INSTALLATION (Section 3.5.2)

See addendum "Monitor Tiller Adapter - 2010" for tiller adapters supplied as of June 28, 2010.